


INSTALLATION WINDOWS LIFTER SMART 6 - 16 PIN

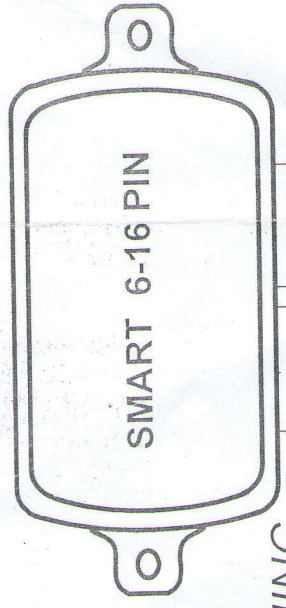

BLINKERS PROGRAMMING

CONNECT THE PINK WIRE TO BLINKERS TRIGGER THAT ACTIVATED WITH THE ORIGINAL REMOTE. CONNECT THE W.L TO POWER, WAIT 3 SEC AND PRESS LOCK IN THE ORIGINAL REMOTE. THE TIME FOR PROGRAMMING IS 3-10 SEC FROM CONNECTING POWER.

IF THE PROGRAMMING SUCCEEDS THE WINDOW UP, OTHERWISE REPROGRAMMING THE SYSTEM.

- +12V
- GND
- BLINKERS / TRIGGER +
- TRIGGER (-)
- Relay5 - COM - IGN out
- Relay5 - N.C - IGN in
- Relay6 - COM - 8 SEC OUTPUT
- Relay -6 N.O - SET PORT COMMAND POLARITY

